SAMSUNG

HW-H600

User manual

Wireless Audio - SoundStand

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please register your product at
www.samsung.com/register

FEATURES

TV SoundConnect

TV SoundConnect lets you listen to audio from your TV on your SoundStand via a Bluetooth connection and lets you control the sound.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture.
The unit is also equipped with the ARC function which lets you listen to sound from your TV through the SoundStand via an HDMI cable.This function is only available if you connect the unit to an ARC compliant TV.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience. Surround Sound Expansion is powered by Sonic Emotion.

Special Sound Modes

You can select different sound modes - CINEMA / SPORTS / VOICE / MUSIC / STANDARD (OFF) - depending on the type of content you want to enjoy.

Multi-function Remote Control

You can use the supplied remote control to control various operations with the simple press of a button.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the SoundStand's USB HOST function.

Bluetooth Function

You can use connect a Bluetooth device to the SoundStand and enjoy music with high quality stereo sound, all without wires!

NFC

Connect your NFC compatible device via Bluetooth to the SoundStand using this simple set-up procedure and play music on the device through the SoundStand.

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

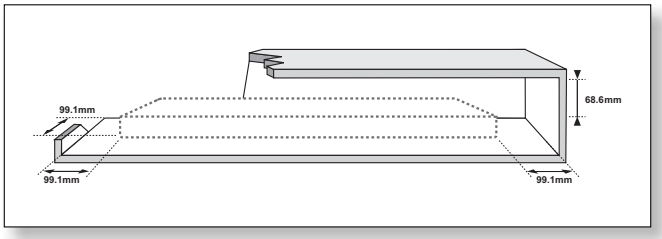

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation 7~10 cm. Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

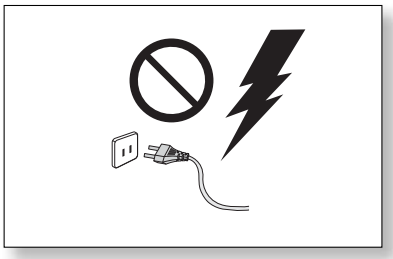

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

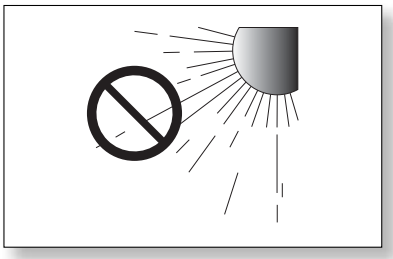

Do not expose the unit to direct sunlight or other heat sources.

This could lead to overheating and cause the unit to malfunction.

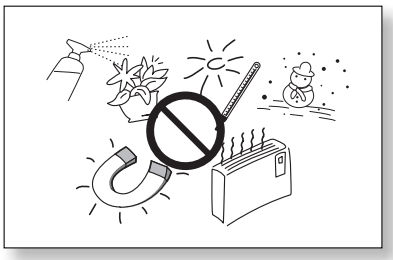

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

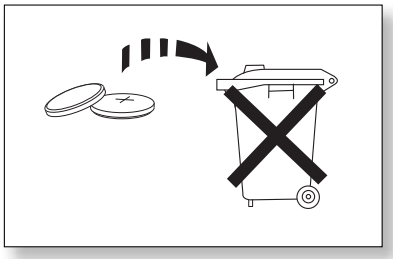

The batteries used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Do not dispose of batteries in a fire.

Do not short circuit, disassemble, or overheat the batteries.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CONTENTS

2 FEATURES

3 SAFETY INFORMATION

3 Safety warnings
4 Precautions

6 GETTING STARTED

6 Before reading the user's manual
6 What's included

7 DESCRIPTIONS

7 Top/front panel
8 Rear panel

9 REMOTE CONTROL

9 Remote control buttons and functions

11 INSTALLATION

11 SoundStand installation

12 CONNECTIONS

12 Connecting an external device using an HDMI cable
13 Connecting an external device using OPTICAL (DIGITAL) cable or AUDIO (ANALOGUE) cable

14 FUNCTIONS

14 Input mode
14 ARC (HDMI OUT)
15 Bluetooth
17 NFC
18 TV SoundConnect
19 USB
20 Software upgrade

21 TROUBLESHOOTING

22 APPENDIX

22 Specifications
22 License

GETTING STARTED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help you operate a function.

► Safety Instructions and Troubleshooting

1) Be sure to familiarise yourself with the Safety Instructions before using this product. (See page 3)

2) If a problem occurs, check Troubleshooting. (See page 21)

► Copyright

©2014 Samsung Electronics Co.,Ltd.
All rights reserved; no part of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED

Check for the supplied accessories shown below.

Remote Control / Lithium Battery (3V : CR2032)



User Manual

AUX Cable

(Protection pad : 4ea)

Pad

Adapter

Power Cord

USB Cable

NFC Sticker

- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

DESCRIPTIONS

TOP/FRONT PANEL

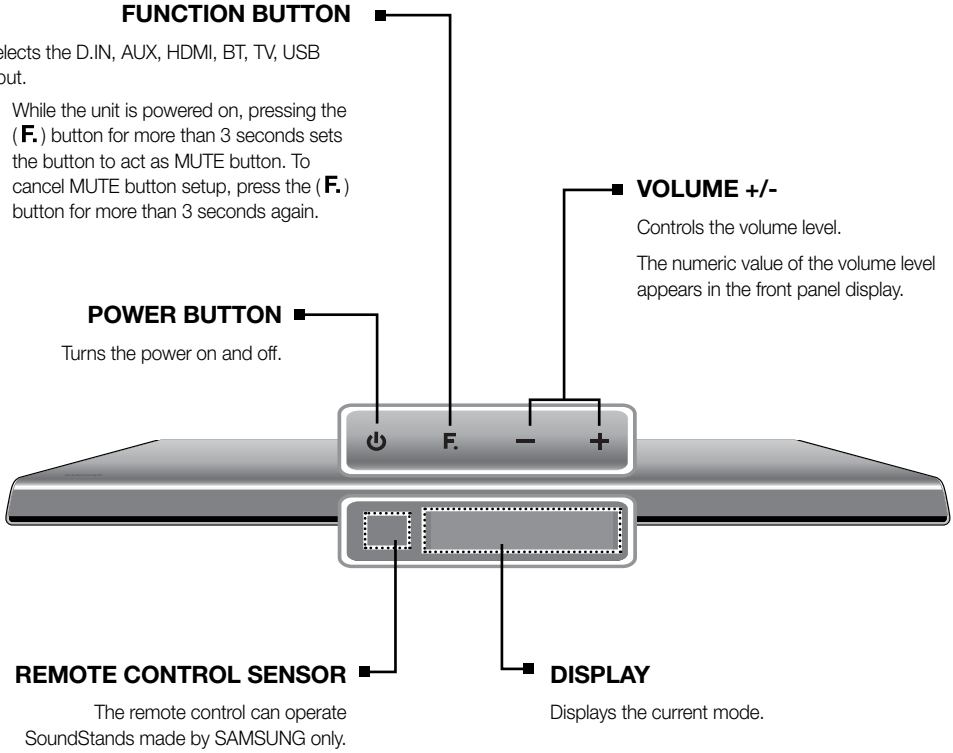
FUNCTION BUTTON
Selects the D.IN, AUX, HDMI, BT, TV, USB input.
While the unit is powered on, pressing the (F.) button for more than 3 seconds sets the button to act as MUTE button. To cancel MUTE button setup, press the (F.) button for more than 3 seconds again.
VOLUME +/-
Controls the volume level.
The numeric value of the volume level appears in the front panel display.
POWER BUTTON
Turns the power on and off.
F.
REMOTE CONTROL SENSOR
The remote control can operate SoundStands made by SAMSUNG only.
DISPLAY
Displays the current mode.

- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the SoundStand, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

REAR PANEL

OPTICAL IN

Connect to the digital (optical) output of an external device.

AUX IN

Connect to the Analogue output of an external device.

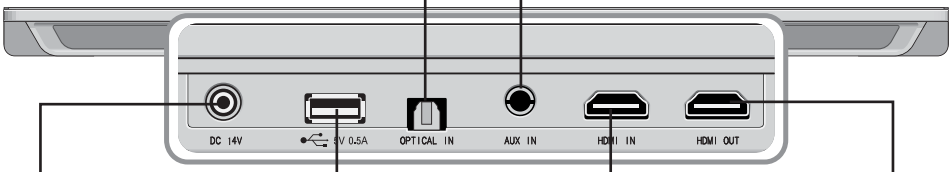

Power Supply IN

Connect the AC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

HDMI OUT Jack

Outputs digital video and audio signals simultaneously using an HDMI cable.

USB PORT

Connect USB devices such as MP3 players here to the play files on the devices.

HDMI IN Jack

Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.

- When disconnecting the power cable of the AC power adaptor from the wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

REMOTE CONTROL

ENG

REMOTE CONTROL BUTTONS AND FUNCTIONS

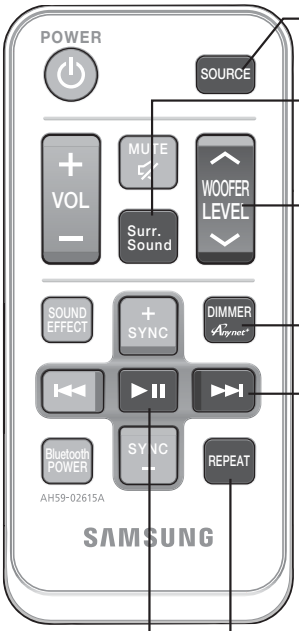

SOURCE

Press to select a source connected to the SoundStand.

Surr.Sound (Surround Sound Expansion)

Press the **Surr.Sound** button on the remote to adds depth and spaciousness to the sound.

SURROUND SOUND AUTO : If the sound source is more than 2 channels then SURROUND SOUND ON turns on automatically. On the other hand, if the sound source is less than 2 channels (STEREO), then mode is automatically set to SURROUND SOUND OFF.

WOOFER

You can control the woofer volume.

Press ∧ or ∨ button on the **WOOFER LEVEL** button to increase or decrease the woofer volume. You can set it from SW -6 to SW +6.

DIMMER/ANYNET+

DIMMER : Press the **DIMMER/ANYNET+** button on the remote to control the brightness of the display.

ANYNET+ : Turns on the ANYNET+ function which lets the remote from your Anynet+ Samsung TV control the SoundStand. The ANYNET+ function toggles on and off each time the **DIMMER/ ANYNET+** button is pressed and held for more than 5 seconds.

Skip Forward

If there is more than one file on the device you are playing, and you press the ▶▶I button, the next file is selected.

REPEAT

You can set the REPEAT function during music playback from a USB device.

REPEAT OFF : Cancels Repeat Playback.

REPEAT FILE : Repeatedly play a track.

REPEAT ALL : Repeatedly play all tracks.

REPEAT RANDOM : Plays tracks in random order. (A track that has already been played may be played again.)

Play/Pause

Press the ▶II button to pause playing the file temporarily.
Press the ▶II button again to play the selected file.

- SoundStand is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

POWER

Turns the SoundStand on and off.

MUTE

You can turn the volume down to 0 with the push of a button. Press again to restore the sound to the previous volume level.

VOLUME

Adjusts the volume level of the unit.

SOUND EFFECT

Press **SOUND EFFECT** on the remote control to select a sound mode. Select the **STANDARD** mode if you want to enjoy the original sound. We recommend that you select a Sound Effect mode based on the source material and your personal taste.

Skip Back

If there is more than one file on the device you are playing, and you press the ⏮ button, the previous file is selected.

Bluetooth POWER

Press the **Bluetooth POWER** button on the remote to turn the Bluetooth Power function on and off.
See pages 16 and 18 for details.

AUDIO SYNC

If the SoundStand is connected to a digital TV and the video appears out of sync with the audio, press the Audio Sync buttons to sync the audio with the video.
Press the **AUDIO SYNC +/-** buttons to set the audio delay from 0 to 300 ms. In USB mode, TV mode, or BT mode, the Audio Sync function may not work.

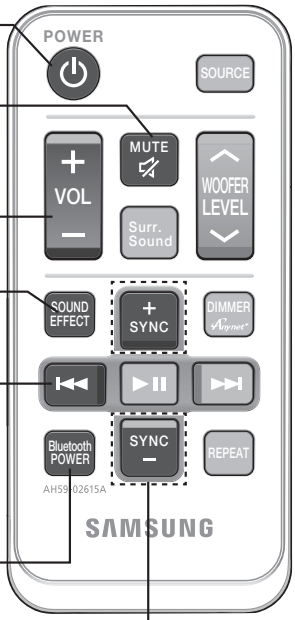

► Installing Batteries in the Remote Control

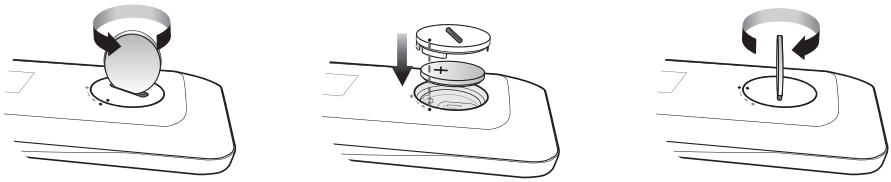

1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.
3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

INSTALLATION

SOUNDSTAND INSTALLATION

If you want to place your TV on top of the SoundStand, please make sure that your TV satisfies the two conditions below:

- Maximum TV weight : **35 kg**
- Maximum TV stand dimension : **Smaller than 720 mm X 320 mm**

※ Fits most TVs up to 1524mm and up to 35kg (*TV screen size and stand type may vary)

► How to install the SoundStand

	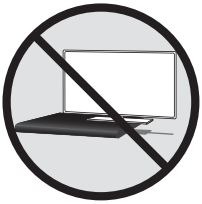
Correct installation	**Do not place the TV to one side on the SoundStand**
Do not place the SoundStand near the edge of a TV shelf, table, or entertainment center.	**Do not place a TV whose base is bigger than the SoundStand's top surface on the SoundStand.**

- Do not place the TV to one side on the SoundStand. The TV may tip over and may cause physical injury.
- Make sure to place the SoundStand in the center of the shelf, table, etc., when you install it. Do not place it near an edge.
- If the TV is bigger than the SoundStand, consider a wall-mounted TV installation or place the SoundStand on a stable surface.
- Keep the SoundStand at least 5 cm away from the wall when you install it.

► Using the protection pads

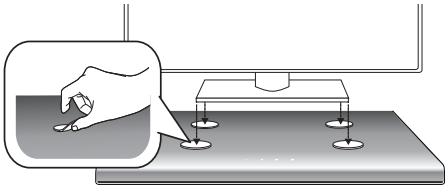

Place the included protective pads on top of the product and then place the TV stand on top of them to prevent scratches on the product's surface.

CONNECTIONS

CONNECTING AN EXTERNAL DEVICE USING AN HDMI CABLE

HDMI is the standard digital interface for connecting to such devices as a TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.

HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

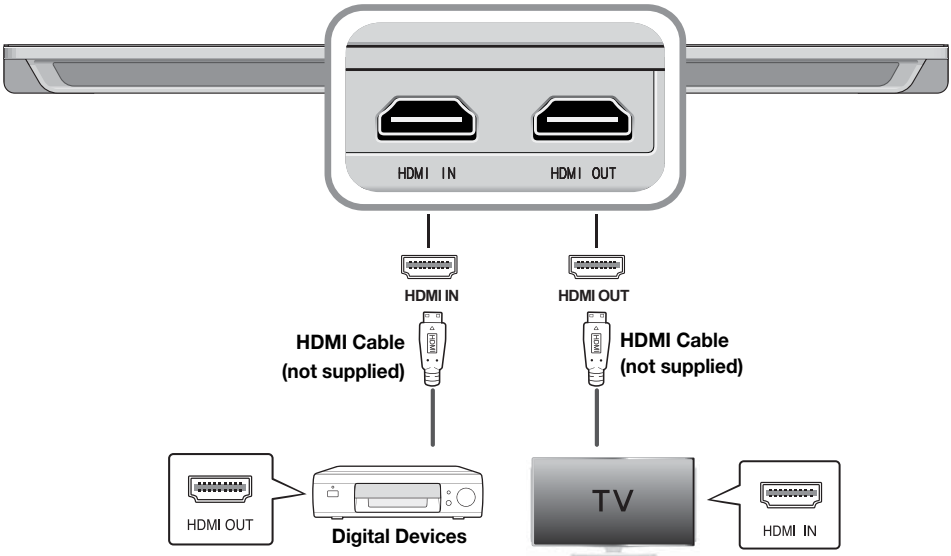

HDMI IN

Connect an HDMI cable (not supplied) from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.

and,

HDMI OUT (HDMI)

Connect an HDMI cable (not supplied) from the **HDMI OUT** jack on the back of the product to the HDMI IN jack on your TV.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.

HDMI OUT (ARC)

The ARC function allows digital audio to output via the **HDMI OUT**(ARC) port.

It can be enabled only when the SoundStand is connected to a TV that supports the ARC function

- ANYNET+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTING AN EXTERNAL DEVICE USING OPTICAL (DIGITAL) CABLE OR AUDIO (ANALOGUE) CABLE

This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to a TV.

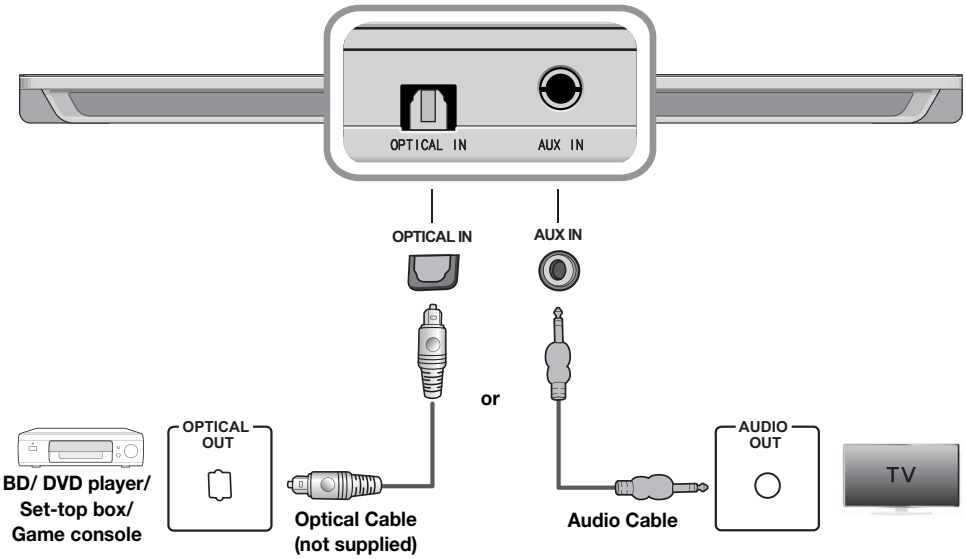

OPTICAL IN

Connect **OPTICAL IN** on the main unit to the OPTICAL OUT of the TV or Source Device.

- Do not connect the power cord of this product or your TV to the wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord

or,

AUX IN

Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT of the TV or Source Device.
Be sure to match connector colours.

FUNCTIONS

INPUT MODE

Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to select the mode you want.

Input mode	Display
Optical Digital input	**D.IN**
AUX input	**AUX**
HDMI input	**HDMI**
BLUETOOTH mode	**BT**
TV mode	**TV**
USB mode	**USB**

The unit turns off automatically in the following situations.

- D.IN/HDMI/BT/TV/USB/ARC Mode
  - If there is no audio signal for 25 minutes.
- AUX Mode
  - If the AUX cable is disconnected for 25 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected. To turn this function ON or OFF, press and hold the ►II button for 5 seconds. AUTO POWER DOWN ON / OFF appears on the display.

ARC (HDMI OUT)

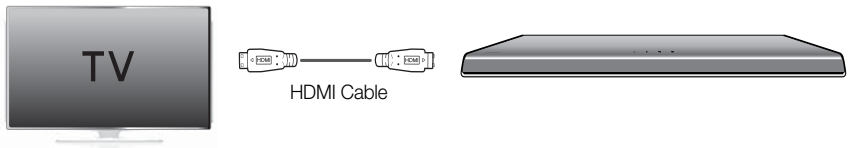

- The ARC function allows digital audio to output via the HDMI OUT (ARC) port.
  It can be enabled only when the SoundStand is connected to a TV that supports the ARC function.
- ANYNET+ must be turned on.

- This function is not available if the HDMI cable does not support ARC.
- The ARC function is activated in D.IN mode if you have connected the unit to a TV that supports ARC.
- To turn off the ARC function, turn ANYNET+ off.

BLUETOOTH

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

► To connect the SoundStand to a Bluetooth device

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

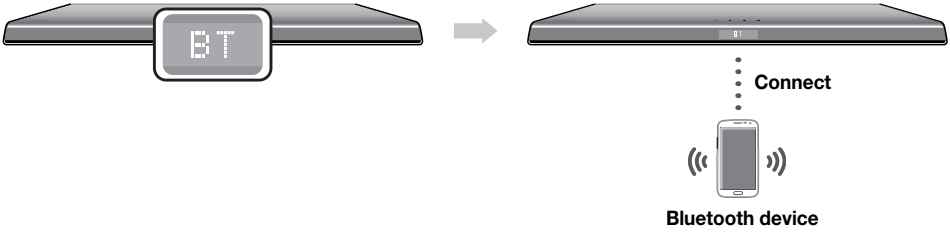

1. Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to display the **BT** message.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select the Stereo headset menu on the Bluetooth device.
   - You will see a list of scanned devices.
4. Select **"[Samsung] SoundStand"** from the list.
   - When the SoundStand is connected to the Bluetooth device, it will display [Bluetooth device name] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the SoundStand, delete the previous "**[Samsung] SoundStand**" found by the Bluetooth device and have it search for the SoundStand again.
5. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the SoundStand.
   - In BT mode, the Play/Pause/Next/Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.

- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- Bluetooth connection will be terminated when you turn the SoundStand off.
- The SoundStand may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the SoundStand.
  - If several Bluetooth devices are simultaneously paired with SoundStand.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The SoundStand supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the SoundStand to a Bluetooth device that supports only the HF (Hands Free) function.

► Bluetooth POWER on (Bluetooth POWER)

When the Bluetooth Power On function is on and the SoundStand is turned off, if a previously paired Bluetooth device tries to pair with the SoundStand, the SoundStand turns on automatically.

1. Press the **Bluetooth POWER** button on the remote control.
2. Bluetooth POWER on appears on the SoundStand's display.

- Available only if the SoundStand is listed among the Bluetooth device's paired devices. (The Bluetooth device and the SoundStand must have been previously paired at least once.)
- SoundStand will appear in the Bluetooth device's searched devices list only when the SoundStand is displaying [BT READY].
- In the TV SoundConnect mode, the SoundStand cannot be paired to another Bluetooth device.
- If the SoundStand is connected to a TV through TV SoundConnect, and you turn the the SoundStand off by turning off the TV, the Bluetooth Power function will not turn the SoundStand on.

► To disconnect the Bluetooth device from the SoundStand

You can disconnect the Bluetooth device from the SoundStand. For instructions, see the Bluetooth device's user manual.

- The SoundStand will be disconnected.
- When the SoundStand is disconnected from the Bluetooth device, the SoundStand will display **BT DISCONNECTED** on the front display.

► To disconnect the SoundStand from the Bluetooth device

Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to switch from **BT** to another mode or turn off the SoundStand.

- The connected Bluetooth device will wait a certain amount of time for a response from the SoundStand before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the SoundStand and the Bluetooth device exceeds 5m.
- The SoundStand automatically turns off after 25 minutes in the Ready state.

More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the SoundStand.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the SoundStand with the Bluetooth device while they are close together.
- The further the distance between the SoundStand and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

NFC

You can connect your SoundStand to an NFC-enabled smart device through a Bluetooth connection with a simple setup. Once connected, you can enjoy music stored in your smart device through the SoundStand.

► Connecting with NFC and smart devices

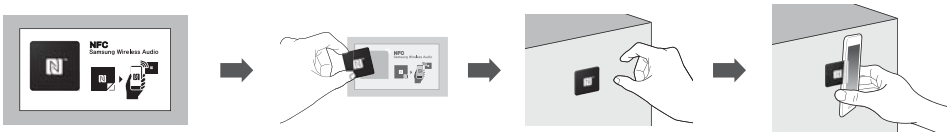

1. Detach the NFC sticker label from the package and attach it to a desired spot.
   - Putting the NFC sticker within a 3m radius from the unit is recommanded.
   - Do not attach the NFC sticker on a metallic surface including the SoundStand. Metallic object may interfere with communication and the NFC sticker may not work properly.
2. Press the (**F.**) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
3. Enable the NFC function of your smart device.
4. Bring your smart device's NFC antenna close to the NFC label.
5. When the connection prompt appears on your smart device's display, select **<Yes>**.
   - Once the connection is established, the completion message appears.

※ To reconnect once the initial connection had been successful, start from step 3.

► Disconnecting NFC

Bring your smart device's NFC antenna close to the NFC label on the SoundStand again. The disconnection message appears on the smart device's display.

► To connect another smart device to the SoundStand which is already connected to another NFC compatible device

After disconnecting from the previously connected device, bring the new smart device close to the NFC label of the SoundStand.

- The NFC function is implemented in Android v4.1.2 Jelly Bean and later operating systems.
  - To make NFC connections, your smart device needs both Android OS 4.1.2 Jelly Bean or later and the NFC tag for NFC function execution. You also need to download the "Samsung NFC Connection" application from the Google Playstore and install it on your smart device. For further details, please refer to the smart device's user manual.
- The location of the NFC antenna is different in different devices. Confirm the location of your smart device's antenna in the device's user manual before attempting to pair it with the SoundStand.
- If your smart device is in a thick housing or case, the NFC connection may not be stable.
- The N-mark is a trade mark or registered trade mark of the NFC Forum Inc. in the United States and other countries.
- If you have trouble with an NFC connection
  - Actually touching your smart device to the NFC label can cause NFC connection failure.
  - If the "Empty tag" error is displayed on the smart device, please try again.
  - Check whether your smart device's antenna is close enough to the NFC logo.
- If you turn off the SoundStand when the Bluetooth Power On feature is ON, and then try to connect a Bluetooth device that has been previously connected using NFC, the SoundStand will turn on automatically when the device connects.
  To set the Bluetooth Power On option, see page 16.

TV SOUNDCONNECT

You can enjoy TV sound through your SoundStand connected to a Samsung TV that supports TV SoundConnect function.

► Connecting a TV to the SoundStand



1. Turn on the TV and SoundStand.
   - Set the "Add New Device" menu of the TV to "On".
2. Press the (**F.**) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function. "[Samsung] SoundStand" is displayed on the TV screen.
4. Select **<Yes>** to finish connecting the TV and SoundStand by TV remote control.

- Switching the SoundStand's mode from TV to another automatically terminates TV SoundConnect.
- To connect the SoundStand to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, then press the ►II button on the remote control for 5 seconds to connect to another TV.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.)
- If your Samsung TV is released before 2014, check the SoundShare setting menu.
- If the distance between the TV and SoundStand exceeds 5m, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or SoundStand so that they are within operational range, and then re-establish the TV SoundConnect connection.

- TV SoundConnect Operational Range
  - Recommended pairing range: within 50 cm
  - Recommended operational range: within 5 m
- Play/Pause, Next, Prev buttons are not operable in TV SoundConnect mode.

► Using the Bluetooth POWER On function

The Bluetooth POWER On function is available after you have successfully connected the SoundStand to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the SoundStand's power on and off as well.

1. Connect the TV with your SoundStand using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the SoundStand remote. "BLUETOOTH POWER ON" appears on the SoundStand's display.
   - BLUETOOTH POWER ON : The SoundStand turns on and off when you turn the TV on or off.
   - BLUETOOTH POWER OFF : The SoundStand only turns off when you turn the TV off.

- This function is supported only by some Samsung TVs released from 2013 on.
- If the SoundStand is connected to a TV through TV SoundConnect, and you turn the SoundStand off by turning off the TV, the Bluetooth Power function will not turn the SoundStand on, even if you connect another Bluetooth device to it.

USB

You can play music files located on USB storage devices through the SoundStand.

USB port

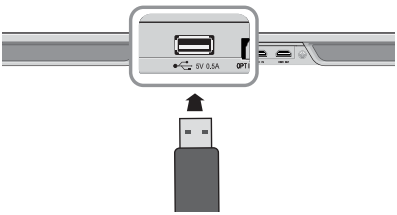

Display

1. Connect the USB device to the USB port on the back of the product.
2. Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel repeatedly until **USB** appears.
3. **USB** appears on the display screen.
   - The SoundStand connection to the USB device is complete.
   - The SoundStand automatically turns off (Auto Power Off) if no USB device has been connected for more than 25 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file or folder on a USB device exceeds 10 characters, it is not displayed on the SoundStand's display.
- This product may not be compatible with certain types of USB storage media.
- The SoundStand supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is being read.
- DRM-protected music files (MP3, WMA) from a commercial web site cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Format	Codec
***.mp3**	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
***.wma**	Wave_Format_MSAudio1
	Wave_Format_MSAudio2
***.aac**	AAC
	AAC-LC
	HE-AAC
***.wav**	-
***.ogg**	OGG 1.1.0
***.flac**	FLAC 1.1.0, FLAC 1.2.1

※ Supported Sampling Rate above 16KHz

SOFTWARE UPGRADE

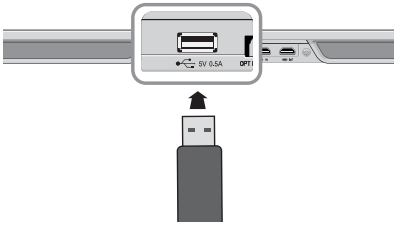

Samsung may offer upgrades for the SoundStand's system firmware in the future.

If an upgrade is offered, you can upgrade the firmware by connecting a USB device with the firmware upgrade stored on it to the USB port on your SoundStand.

Note that if there are multiple upgrade files, you must load them onto the USB device singly and use them to upgrade the firmware one at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading upgrades files.

- Insert a USB device containing the firmware upgrade into the USB port on the main unit.
- Do not disconnect the power or remove the USB device while upgrades are being applied. The main unit will turn off automatically after completing the firmware upgrade.
  When software is upgraded, all settings are reset to their factory default settings.
  We recommend you write down your settings so that you can easily reset them after the upgrade.
- Once the software upgrade is completed, turn off the product and then press and hold the (▶II) button for a while to reset the product.
- If the firmware fails to upgrade, we recommend formatting the USB device in FAT16 and trying again.
- Do not format the USB device in the NTFS format. The SoundStand does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the aerial?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the Mute button to cancel the function.
• Is the volume set to minimum?	→ Adjust the volume .

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released after 2012. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung call centre.
• Reset the TV MODE and connect again.	→ Press and hold the ►II button for 5 seconds to reset the TV SoundConnect connection.

APPENDIX

SPECIFICATIONS

Model name	HW-H600

GENERAL	USB	5V/0.5A
	Weight	5 kg
	Dimensions (W x H x D)	735 x 36.5 x 360 mm
	Operating temperature range	+5°C ~ +35°C
	Operating humidity range	10 % to 75 %
AMPLIFIER	Rated output power	80 W(MID/TWT = 8 OHM, SW = 4 OHM) THD = 10 %, 1 kHz
	S/N ratio (analogue input)	65 dB
	Separation (1kHz)	65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

LICENSE

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

ENERGY STAR PARTNER

As an ENERGY STAR Partner, Samsung has determined that this product or product models meets the ENERGY STAR guidelines for energy efficiency.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG (726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	www.samsung.com/Levant/support (English)
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

SAMSUNG

HW-H600

使用說明書

Wireless Audio - SoundStand

無窮想像，無限可能

感謝您購買三星產品。

欲享受更加全面的服務，請到以下網站註冊您的產品：

www.samsung.com/register

特性

TV SoundConnect

電視聲音連接可讓您透過藍牙連線在 SoundStand 上聆聽來自電視機的聲音，還可讓您控制該聲音。

HDMI

HDMI 可同時傳輸影音訊號，並提供清晰的圖像。
本設備還配備有 ARC 功能，可讓您以 HDMI 纜線透過 SoundStand 聆聽來自電視機的聲音。
此功能僅在您將本設備連接至 ARC 標準電視機時可用。

Surround Sound Expansion(環繞聲擴展)

Surround Sound Expansion(環繞聲擴展) 功能增強了聆聽體驗的深度和廣度。 Surround Sound Expansion(環繞聲擴展) 由 Sonic Emotion 提供技術支援。

特殊音效模式

您可以根據要欣賞的內容類型選擇不同的音效模式 - CINEMA(電影) / SPORTS(體育) / VOICE(語音) / MUSIC(音樂) / STANDARD(OFF)(標準(關閉))。

多功能遙控器

您可以使用附送的遙控器，按幾下按鍵即可控制各種操作。

USB Host 支援

您可以使用 SoundStand 的 USB HOST 功能連接外部 USB 儲存裝置 (例如 MP3 播放器、USB 快閃記憶體等) 並播放其中的音樂檔案。

藍牙功能

您可以使用藍牙裝置連線到 SoundStand 並欣賞高品質立體聲音樂，所有一切皆無需連線！

NFC

使用下面這個簡單的設定程序，透過藍牙將 NFC 相容裝置連接至 SoundStand，然後透過 SoundStand 播放該裝置上的音樂。

安全資訊

安全警告

為防止電擊，請勿拆卸蓋板 (或背板)。
本機內部無使用者可以自行維修的零件。 如需維修，請由專門的服務人員進行維修。

	這個閃電標誌是提醒使用者注意，本產品內部帶有足以造成電擊或人身傷害的「危險電壓」。
	該標誌用於提醒使用者注意本產品隨附的重要說明。

警告 : 請勿將本機暴露在雨中或潮濕場所，以免火災或電擊。

注意 : 為防止電擊，請將寬片插頭完全插入匹配的寬插槽。

- 本設備應始終連接到帶有保護地線連接的交流電插座。
- 設備與電源斷開連接時，必須將插頭從電源插座上拔出，因此電源插頭應隨時保持便於操作。

注意

- 請勿將水滴落或噴灑在設備上， 不得在設備上放置裝有液體的物品，如花瓶。
- 要完全關閉本設備，須將電源插頭從牆上電源插座拔出。 因此，電源插頭應隨時保持便於操作。

注意事項

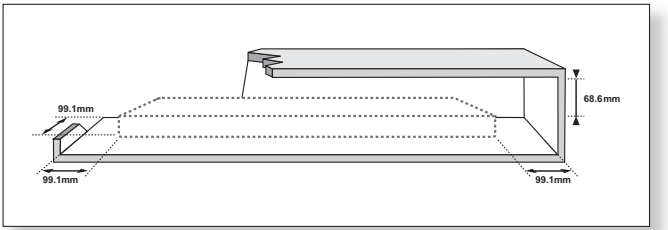

請確保您家中的交流電源符合產品背面標示貼紙上的要求。 請將產品安裝在水平、適當的基座 (家具) 上，並在周邊留下足夠的通風空間 7~10 釐米。 確保通風孔未被堵塞。 請勿將本設備放在放大器或其他會發熱的設備上。 本設備可供連續使用。 要完全斷開設備的電源連接，請從牆上電源插座上拔掉交流電插頭。 如果長時間不使用設備，請拔下其電源插頭。

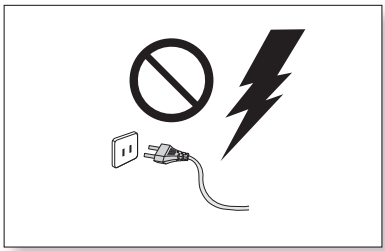

在雷雨天氣時，請從牆上電源插座拔下交流電插頭。 閃電造成的電壓峰值會損壞本設備。

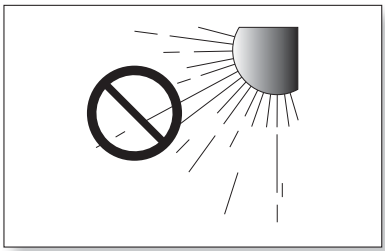

請勿將本設備直接在陽光下暴曬或暴露於其他熱源下。

這可能導致本設備過熱而發生故障。

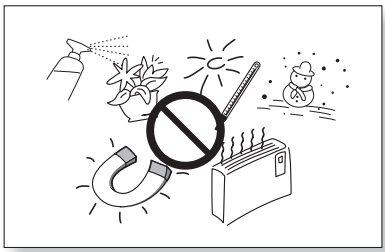

本產品應避免接觸潮濕 (如花瓶) 以及過熱 (如壁爐) 或者會產生強磁或電場的設備。 如果設備發生故障，請從交流電源拔下電源線。 本產品並非供工業使用， 而是僅供個人使用。

如果本產品存放在低溫環境中，則可能會出現冷凝現象。 如果在冬天將本設備運送到室內，則需要等待大約 2 小時的時間，以便本機在使用前達到室內溫度。

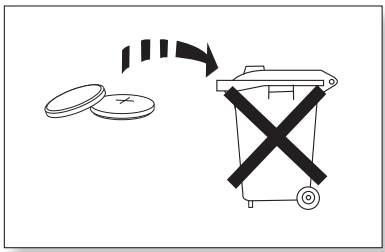

本產品使用的電池含有對環境有害的化學物質。

請勿將電池作為普通生活垃圾棄置。

請勿將電池置於火中。

請勿使電池短路、分解或過熱。

如果沒有正確替換電池，可能會導致危險。

僅可使用同樣或相同類別的電池替換。

目錄

2 特性

3 安全資訊

3 安全警告

4 注意事項

6 使用入門

6 閱讀使用說明書之前注意事項

6 包裝附帶內容

7 描述

7 頂端面板/前面板

8 後面板

9 遙控器

9 遙控器按鍵和功能

11 安裝

11 SoundStand 安裝

12 連接

12 使用 HDMI 纜線連接外部裝置

13 使用光學 (數碼) 纜線或音訊 (模擬) 纜線連接外部裝置

14 功能

14 輸入模式

14 ARC (HDMI OUT)

15 藍牙

17 NFC

18 TV SoundConnect

19 USB

20 軟件升級

21 故障排除

22 附錄

22 規格

22 授權

使用入門

閱讀使用說明書之前注意事項

閱讀使用說明書之前，請注意下列術語。

► 本說明書中使用的圖示

圖示	術語	定義
	注意	表示功能不起作用或設定可能已取消的情況。
	注	表示頁面上有協助功能操作的提示或說明。

► 安全說明與故障排除

1) 在使用本產品之前，請確保熟悉「安全說明」。 (請參閱第 3 頁)

2) 如果出現問題，請查閱「故障排除」。 (請參閱第 21 頁)

► 版權

©2014 Samsung Electronics Co.,Ltd.
版權所有；未經 Samsung Electronics Co.,Ltd. 事先書面許可，不得複製或影印本使用說明書的部分或全部內容。

包裝附帶內容

請檢查是否提供下面所示的附件。

遙控器 /
鋰电池
(3V : CR2032)



使用說明書

AUX 纜線

（保護墊： 4 個）

保護墊

適配器

電源線

USB 纜線

NFC 貼

- 附件的外觀可能與上述圖例略有不同。
- 請使用專用的 USB 纜線將外部 USB 裝置連接至本設備。

描述

頂端面板/前面板

功能鍵

用於選擇
D.IN、AUX、HDMI、BT、TV、USB
輸入。

- 在本設備開啟電源後，按住 (F.) 鍵超過 3 秒鐘會將該鍵設定用作 MUTE(靜音) 鍵。 要取消 MUTE(靜音) 鍵設定，再次按住 (F.) 鍵超過 3 秒鐘。

電源鍵

開啟或關閉電源。

音量 +/-

控制音量。

音量的數字值將顯示在前面板顯示螢幕上。

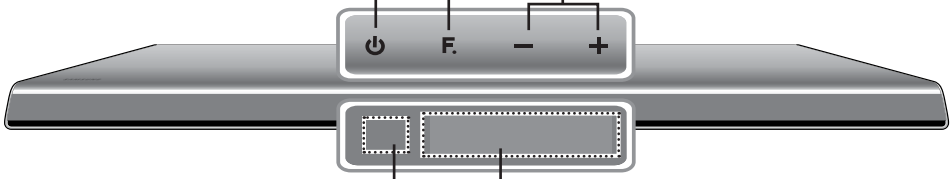

遙控傳感器

本遙控器只能操控三星生產的 SoundStand。

顯示螢幕

顯示目前的模式。

- 開啟本設備時，等待 4 至 5 秒鐘後才會發出聲音。
- 如果希望僅欣賞來自 SoundStand 的聲音，必須在電視機的 Audio Setup(音訊設定) 功能表中關閉電視機的音箱。 請參閱電視機隨附的使用說明書。

後面板

OPTICAL IN

連接至外部裝置的數碼 (光學) 輸出。

AUX IN

連接至外部裝置的模擬輸出。

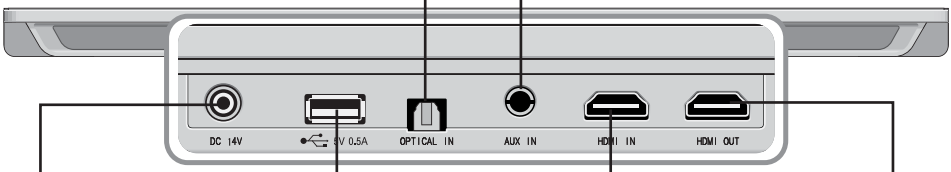

電源輸入

將交流電源適配器插孔正常連接到電源插孔，然後將交流電源適配器插頭插入壁裝電源插座。

HDMI OUT 插孔

使用 HDMI 纜線同時輸出數碼視訊及音訊訊號。

USB 插孔

將 USB 裝置 (例如 MP3 播放器) 連接於此以播放裝置中的檔案。

HDMI IN 插孔

使用 HDMI 纜線同時輸出數碼視訊及音訊信號。當連接受支援的外部裝置時使用。

- 從壁裝電源插座斷開交流電源適配器的電源線時，請拔出插頭。 切勿拉扯電源線。
- 在組件之間的連接完成之前，切勿將本設備或其他組件連接到交流電源插座。

遙控器

遙控器按鍵和功能

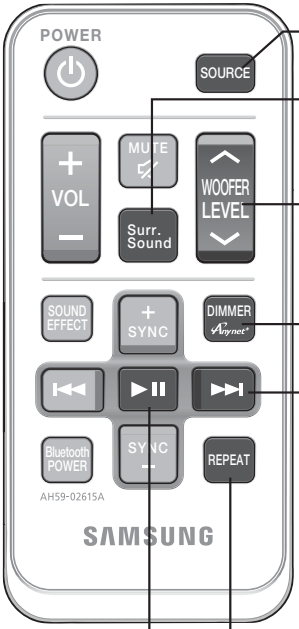

SOURCE
按下以選擇連接至 SoundStand 的來源。

Surr.Sound(Surround Sound Expansion)
按遙控器上的 **Surr.Sound** 鍵以增強聲音深度和廣度的程度。

SURROUND SOUND AUTO : 如果聲音來源超過 2 聲道，則 SURROUND SOUND ON 會自動開啟。 在另一方面，如果聲音來源少於 2 聲道 (立體聲)，則模式會自動設定為 SURROUND SOUND OFF。

WOOFER
您可以控制重低音音箱音量。
如果要提高或降低重低音音箱的音量，請按 **WOOFER LEVEL** 鍵上的 ∧ 或 ∨ 鍵。 其設定範圍從 SW -6 至 SW +6。

DIMMER/ANYNET+
DIMMER : 按遙控器上的 **DIMMER/ANYNET+** 鍵以控制顯示螢幕的亮度。
ANYNET+ : 開啟 ANYNET+ 功能，它可讓您從 ANYNET+ 三星電視機遙控器控制 SoundStand。 每次按住 **DIMMER/ANYNET+** 鍵超過 5 秒鐘，都會在開啟和關閉 ANYNET+ 功能之間切換。

向前跳轉
如果您正在播放的裝置上有兩個或更多個檔案，並且您按 ▶▶I 鍵，則會選擇下一個檔案。

REPEAT
播放 USB 磁碟機中的音樂期間可以設定 REPEAT 功能。
REPEAT OFF : 取消重複播放。
REPEAT FILE : 重複播放一首曲目。
REPEAT ALL : 重複播放所有曲目。
REPEAT RANDOM : 以隨機順序播放曲目。
(已經播放的曲目可能會再次播放。)

播放/暫停
按 ▶II 鍵可暫停播放檔案。
按下 ▶II 鍵可播放選定的檔案。

- SoundStand 是三星的專利名稱。
- 使用電視機的遙控器操控電視機。

POWER

開啟或關閉 SoundStand 的電源。

MUTE

您按一下按鍵就可以將音量調低到 0。 再按一下則使聲音恢復至上次的音量。

VOLUME

調節設備的音量。

SOUND EFFECT

按遙控器上的 **SOUND EFFECT** 選擇聲音模式。 如果您要欣賞原始聲音，請選擇 **STANDARD** 模式。 建議根據來源資料以及您的個人品味選擇音效。

倒轉

如果您正在播放的裝置上有多個檔案，並且您按 ⏮ 鍵，則會選擇上一個檔案。

Bluetooth POWER

按遙控器上的 **Bluetooth POWER** 按鈕開啟和關閉 Bluetooth Power 功能。
如需詳細資料，請參閱第 16 和 18 頁。

SYNC + -

如果將 SoundStand 連接至數碼電視機，並且視訊表現出與音訊不同步，請按 SYNC + - 鍵以使音訊與視訊同步。 按 **SYNC +/-** 鍵可在 0 到 300 ms 的範圍內設定音訊延遲。在 USB 模式、TV 模式或 BT 模式下，音訊同步功能可能無法運作。

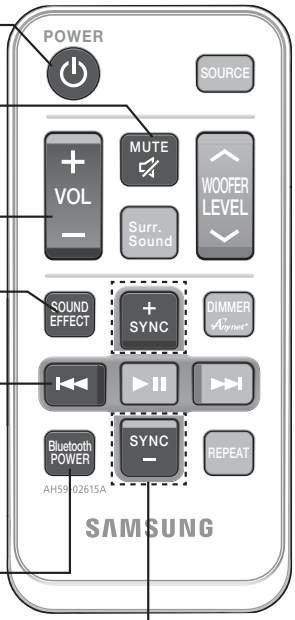

► 在遙控器中裝上電池

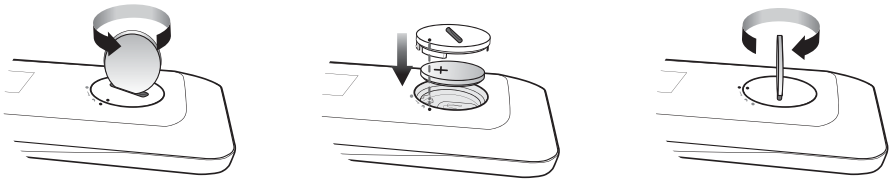

1. 使用適用的錢幣逆時針轉動遙控器電池蓋以將其取下，如上圖中所示。
2. 裝入一節 3V 電池。 裝入電池時，讓正 (+) 極朝上。 蓋上電池蓋，對齊 '●' 標誌，如上圖中所示。
3. 使用適用的錢幣順時針轉動遙控器電池蓋，直到它固定到位為止。

安裝

SOUNDSTAND 安裝

如果您要將電視機放置在 SoundStand 上方，請確保電視機滿足下面兩個條件：

- 最大電視機重量： **35 kg**
- 最大電視機支架尺寸： **小於 720 mm X 320 mm**

※ 大部分電視最多為 1524mm 和 35kg（* 電視螢幕大小和支架類型可能各不相同）

► 如何安裝 SoundStand

正確的安裝	**不要將電視機放置在 SoundStand 的側邊**
不要將 SoundStand 放置在靠近電視機架、桌子或娛樂中心邊緣的位置	**不要將底座大於 SoundStand 頂端表面的電視機放置在 SoundStand 上**

- 不要將電視機放置在 SoundStand 的側邊 電視機可能會側翻，造成人員受傷。
- 安裝時，請確保將 SoundStand 放置在架子、桌子等的中央位置。 不要將它放置在靠近邊緣的位置。
- 如果電視機比 SoundStand 大，請考慮牆壁安裝型電視機安裝或將 SoundStand 放置在平穩的表面上。
- 安裝時，SoundStand 與牆壁之間至少留出 5 公分 的距離。

► 使用保護墊

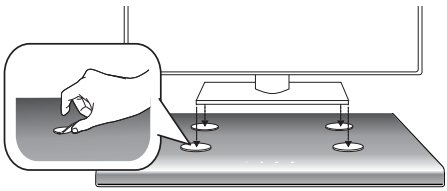

將隨附的保護墊放置在產品上，然後將電視機支架放置在保護墊上，以免刮傷產品表面。

連接

使用 HDMI 纜線連接外部裝置

HDMI 是標準的數碼介面，用於連接電視機、投影機、DVD 播放機、Blu-ray 播放機、機頂盒等裝置。

HDMI 可避免由於轉換為模擬造成的對信號的任何損壞，並保持原始數碼來源的視訊和音訊品質。

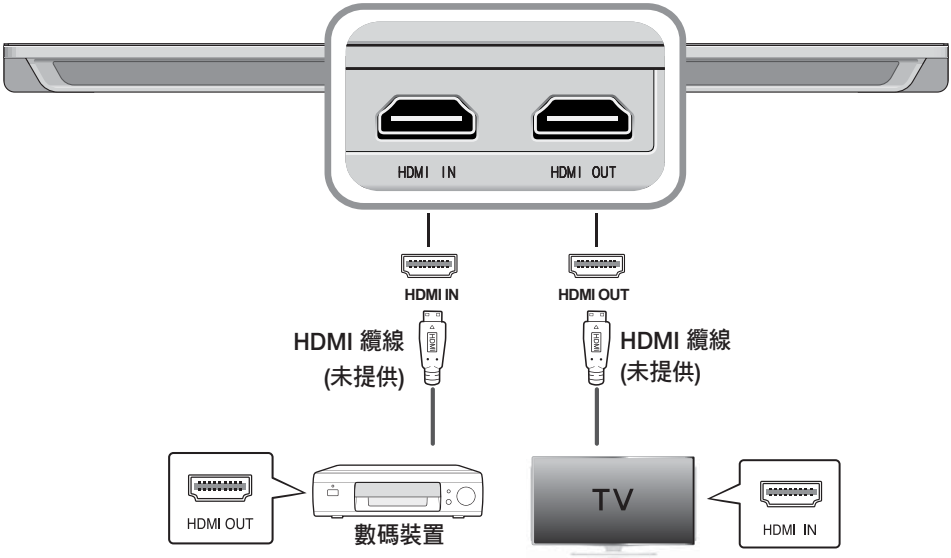

HDMI IN

將 HDMI 纜線 (未提供) 從產品背面的 **HDMI IN** 插孔連接到數碼裝置的 HDMI OUT 插孔。

以及,

HDMI OUT (HDMI)

將 HDMI 纜線 (未提供) 從產品背面的 **HDMI OUT** 插孔連接到電視機的 HDMI IN 插孔。

- HDMI 是一個介面，它允許只需使用單一連接器即可進行視訊及音訊資料的數碼傳輸。

HDMI OUT (ARC)

ARC 功能允許透過 **HDMI OUT**(ARC) 連接埠輸出數碼音訊。

僅當將 SoundStand 連接至支援 ARC 功能的電視機時，該功能才可用。

- 必須開啟 ANYNET+。
- 如果 HDMI 纜線不支援 ARC，就不能使用此功能。

使用光學 (數碼) 纜線或音訊 (模擬) 纜線連接外部裝置

本設備配有一個光學輸入數碼插孔和一個音訊模擬輸入插孔，可讓您以兩種方式將它連接至電視機。

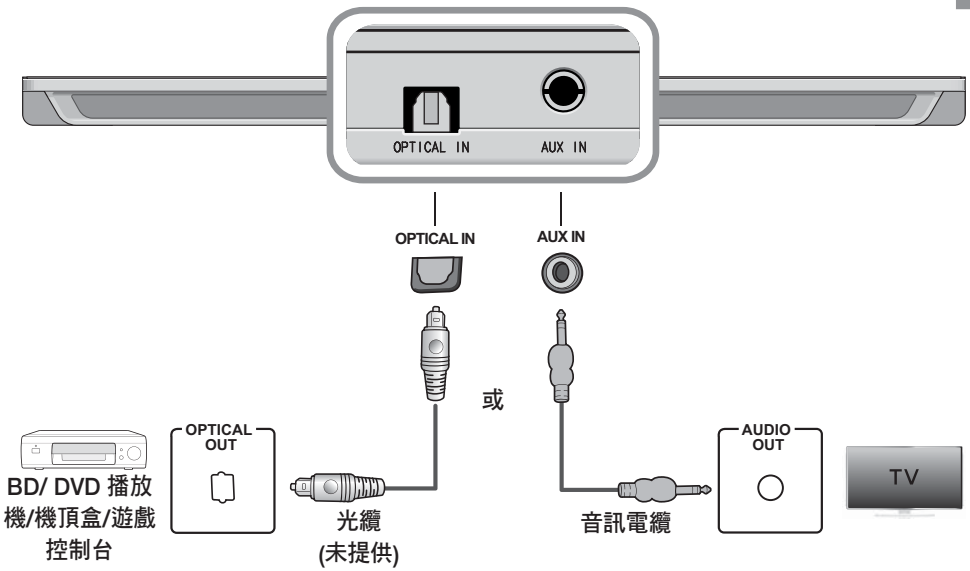

OPTICAL IN

將主設備上的 **OPTICAL IN** 連接至電視機或來源裝置的 OPTICAL OUT。

- 在組件之間的所有連接完成之前，切勿將本產品或電視機連接到牆上插座。
- 在移動或安裝本產品之前，請確定關閉電源並拔下電源線

或,

AUX IN

將主設備上的 **AUX IN**(音訊) 連接至電視機或來源裝置的 AUDIO OUT。
請確保與連接器色彩相符。

功能

輸入模式

按下遙控器上的 **SOURCE** 鍵或產品頂端面板上的 (F.) 鍵，選擇所需的模式。

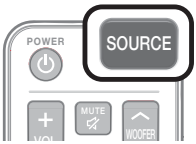

輸入模式	顯示
光學數碼輸入	**D.IN**
AUX 輸入	**AUX**
HDMI 輸入	**HDMI**
BLUETOOTH 模式	**BT**
TV 模式	**TV**
USB 模式	**USB**

本設備在下列情況下會自動關閉.

- D.IN/HDMI/BT/TV/USB/ARC 模式
  - 如果 25 分鐘沒有音訊訊號。
- AUX 模式
  - 如果 AUX 纜線中斷連接長達 25 分鐘。
  - 如果 AUX 線纜連接後 8 小時內沒有按鍵輸入。 若要開啟或關閉此功能，請按住 ►II 鍵 5 秒鐘。 AUTO POWER DOWN ON / OFF 將出現在顯示螢幕上。

ARC (HDMI OUT)

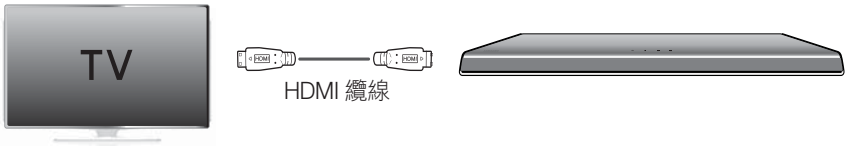

- ARC 功能允許透過 HDMI OUT(HDMI 輸出) (ARC) 連接埠輸出數碼音訊。
  僅當將 SoundStand 連接至支援 ARC 功能的電視機時，該功能才可用
- 必須開啟 ANYNET+。

- 如果 HDMI 纜線不支援 ARC，就不能使用此功能。
- 如果本設備連接至支援 ARC 的電視機，ARC 功能在 D.IN 模式下將會啟動。
- 若要關閉 ARC 功能，關閉 ANYNET+ 即可。

藍牙

您可以使用藍牙裝置來欣賞高品質立體聲音樂，所有一切皆無需連線！

► 將 SoundStand 連接至藍牙裝置

檢查藍牙裝置是否支援符合藍牙的立體聲耳機功能。

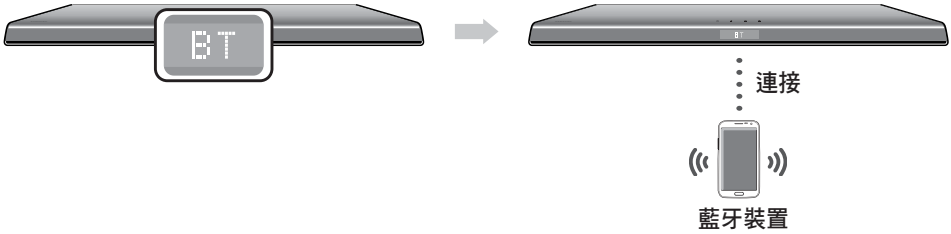

1. 按下遙控器上的 **SOURCE** 鍵或產品頂端面板上的 (**F.**) 鍵，以顯示 **BT** 訊息。
2. 在要連接的藍牙裝置上選擇藍牙功能表。(請參閱藍牙裝置的使用說明書。)
3. 在藍牙裝置上選擇立體聲耳機功能表。
   - 您將會看到掃描到的裝置清單。
4. 從該清單中選擇 **"[Samsung] SoundStand"**。
   - 當將 SoundStand 連接至藍牙裝置時，其前面顯示螢幕會顯示 [藍牙裝置名稱] → **BT**。
   - 裝置名稱只能以英文顯示。 如果名稱不是英文，將會顯示底線 " _ "。
   - 如果藍牙裝置無法與 SoundStand 配對，請刪除之前被藍牙裝置找到的 "**[Samsung] SoundStand**"，讓其重新搜尋 SoundStand。
5. 在連接的裝置上播放音樂。
   - 您可以透過 SoundStand 聆聽在連接的藍牙裝置上播放的音樂。
   - 在 BT 模式下，Play/Pause/Next/Prev 功能無法使用。 不過，在支援 AVRCP 的藍牙裝置中，這些功能可以使用。

- 在連接藍牙裝置時，如果系統要求您提供 PIN 碼，請輸入 <0000>。
- 一次只能配對一個藍牙裝置。
- 關閉 SoundStand 時，藍牙連接將會終止。
- 在下列情況下，SoundStand 可能無法正確執行藍牙搜尋或連接：
  - 如果 SoundStand 周圍具有強電場。
  - 如果多個藍牙裝置同時與 SoundStand 配對。
  - 如果藍牙裝置已關閉、沒有就位或發生故障。
  - 請注意，如微波爐、無線 LAN 適配器、螢光燈和煤氣爐之類的裝置與藍牙裝置使用相同的頻率範圍，可能導致電子干擾。
- SoundStand 支援 SBC 資料 (44.1kHz，48kHz)。
- 僅連接到支援 A2DP (AV) 功能的藍牙裝置。
- 您無法將 SoundStand 連接至僅支援 HF (免持) 功能的藍牙裝置。

► 藍牙開啟電源功能 (Bluetooth POWER)

當 Bluetooth Power On(藍牙打開電源) 功能開啟且 SoundStand 關閉時，如果先前配對的藍牙裝置嘗試與 SoundStand 配對，則 SoundStand 會自動開啟。

1. 按遙控器上的 **Bluetooth POWER** 鍵。
2. Bluetooth POWER on 會出現在 SoundStand 的顯示螢幕上。

- 僅當 SoundStand 列出在藍牙裝置的搜尋到的裝置清單中時可用。 (藍牙裝置和 SoundStand 先前至少必須已配對一次。)
- 僅當 SoundStand 正在顯示 [BT READY] 時，它才會出現在藍牙裝置的搜尋到的裝置清單中。
- 在電視聲音連接模式下，無法將 SoundStand 與另一個藍牙裝置配對。
- 如果透過電視聲音連接將 SoundStand 連接至電視機，然後您透過關閉電視機來關閉 SoundStand，則 Bluetooth Power 功能將無法開啟 SoundStand。

► 從 SoundStand 中斷藍牙裝置

您可以從 SoundStand 中斷藍牙裝置。 如需說明，請參閱藍牙裝置的使用說明書。

- SoundStand 將會中斷連接。
- SoundStand 與藍牙裝置中斷連接時，SoundStand 將會在前顯示螢幕上顯示 **BT DISCONNECTED**。

► 從藍牙裝置中斷 SoundStand

按下遙控器上的 **SOURCE** 鍵或產品頂端面板上的 (**F.**) 以從 **BT** 切換至另一種模式，或者關閉 SoundStand。

- 連接的藍牙裝置將會等待一定的時間，獲得 SoundStand 的回應後再終止連線。 (中斷連接時間可能會視具體的藍牙裝置而不同)

- 在藍牙連接模式下，如果 SoundStand 與藍牙裝置之間的距離超出 5 公尺，藍牙連線將會中斷。
- SoundStand 會在處於 Ready (就緒) 狀態 25 分鐘後自動關閉。

有關藍牙的更多資訊

藍牙是一種技術，可使藍牙相容裝置透過短波無線連接輕鬆地彼此互連。

- 根據使用情況下，藍牙裝置在下列條件下可能會導致躁聲或故障：
  - 當身體的一部分接觸到藍牙裝置或 SoundStand 的接收/傳輸系統時。
  - 由於牆壁、角落或辦公分區的障礙物導致的電子差異。
  - 由相同頻帶裝置 (包括醫療設備、微波爐和無線 LAN) 引起的電子干擾。
- 將 SoundStand 和藍牙裝置保持較近的距離以配對。
- SoundStand 與藍牙裝置之間的距離越遠，訊號品質就越差。
  如果距離超出藍牙作業範圍，連線便會中斷。
- 在接收敏感性較差的區域，藍牙連線可能無法正常工作。
- 藍牙連線僅在其靠近設備時有效。 如果藍牙裝置超出範圍，連線將會自動中斷。 即使在範圍內，聲音品質也可能會由於障礙物 (如牆壁或門) 而下降。
- 此無線裝置在其作業期間可能會導致電子干擾。

NFC

進行簡單的設定之後，您便可以透過藍牙連線將 SoundStand 連接至支援 NFC 的智慧型裝置。連接之後，您便可以透過 SoundStand 欣賞儲存在智慧型裝置中的音樂。

► 連接 NFC 與智慧型裝置

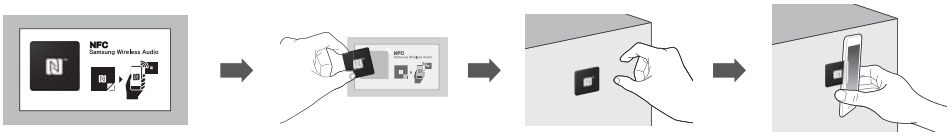

1. 拆下包裝盒中的 NFC 貼紙標籤並將它貼在所需的點。
   - 建議將 NFC 貼放置在離設備 3 公尺以內的半徑範圍內。
   - 不要將 NFC 貼紙貼在包括 SoundStand 在內的金屬表面上。
     金屬物件可能會干擾通訊，並且 NFC 貼紙可能無法正常工作。
2. 按主裝置頂部面板上的 (F) 鍵或遙控器上的 **SOURCE** 鍵選擇 **BT** 模式。
3. 啟用智慧型裝置的 NFC 功能。
4. 使智慧型裝置的 NFC 天線靠近 NFC 標籤。
5. 當連線提示出現在智慧型裝置的顯示螢幕上時，選擇 **<Yes>** (是)。
   - 建立連線之後，完成訊息將會出現。

※ 若要在初始連接成功之後重新連接，請執行從步驟 3 開始的步驟。

► 中斷 NFC

再次使智慧型裝置的 NFC 天線靠近 SoundStand 上的 NFC 標籤。 中斷連接訊息將會出現在智慧型裝置的顯示螢幕上。

► 當 SoundStand 已連接至一個 NFC 相容裝置時連接另一個智慧型裝置

斷開先前連接的裝置的連接後，讓新的智慧型裝置靠近 SoundStand 的 NFC 標籤。

- NFC 功能在 Android v4.1.2 Jelly Bean 或更高版本的作業系統中實施。
  - 為了建立 NFC 連線，智慧型裝置需要 Android 4.1.2 Jelly Bean 或更高版本作業系統和 NFC 標籤才能讓 NFC 功能執行。 您還需要在智慧型裝置上，從 Google Playstore 中下載並安裝 “Samsung NFC Connection” 應用程式。 如需更多詳細資料，請參閱智慧型裝置的使用者手冊。
- 不同裝置中 NFC 天線的位置各不相同。 先在智慧型裝置的使用者手冊中確認裝置的天線位置，然後再嘗試將它與 SoundStand 配對。
- 如果智慧型裝置包在厚厚的外殼或套子中，NFC 連線可能不穩定。
- N 標記是 NFC Forum Inc. 在美國以及其他國家/地區的商標或註冊商標。
- 如果 NFC 連線有問題
  - 使智慧型裝置實際接觸 NFC 標籤可能導致 NFC 連線失敗。
  - 如果智慧型裝置上顯示「Empty tag」(空的標籤) 錯誤，請重試。
  - 檢查智慧型裝置的天線是否足夠靠近 NFC 標記。
- 如果您在 Bluetooth Power On(藍牙打開電源) 功能為 ON(開啟) 時關閉 SoundStand，然後嘗試使用 NFC 連接先前連接的藍牙裝置，則在該裝置連接後，SoundStand 會自動開啟。
  若要設定 Bluetooth Power On(藍牙打開電源) 選項，請參閱第 16 頁。

TV SOUNDCONNECT

您可以透過連接至支援電視聲音連接功能之三星電視機的 SoundStand 欣賞電視機的聲音。

► 將電視機連接至 SoundStand

1. 開啟電視機和 SoundStand。
   - 將電視機的 "Add New Device(新增裝置)" 功能表設定為 "On (開啟)"。
2. 按主裝置頂部面板上的 (F.) 鍵或遙控器上的 **SOURCE** 鍵選擇 **TV** 模式。
3. 在電視機上，將會顯示一則訊息，詢問您是否要啟用電視聲音連接功能。 電視畫面上會顯示 "[Samsung] SoundStand"。
4. 使用電視機的遙控器選取 **<Yes>** (是) 以完成連接電視機與 SoundStand。

- 將 SoundStand 的模式從電視切換為其他模式會自動終止電視聲音連接。
- 若要將 SoundStand 連接至其他電視機，必須終止現有連線。
- 終止與現有電視機的連線，然後按遙控器上的 ►II 鍵 5 秒鐘以連接至另一台電視機。

- 自從 2012 年起發行的一些三星電視機支援電視聲音連接 (SoundShare) 功能。在開始之前，請檢查您的電視機是否支援電視聲音連接 (SoundShare) 功能。如需詳細資訊，請參閱電視機的使用說明書。)
- 如果您的三星電視機是 2014 年之前發行的，請檢查 SoundShare 設定功能表。
- 如果電視機與 SoundStand 之間的距離超過 5 公尺，連線可能會不穩定或音訊可能會斷斷續續。 如果出現這種情況，請重新安放電視機或 SoundStand，使得它們之間的距離在可操作範圍內，然後重新建立電視聲音連接連線。

- 電視聲音連接工作範圍
  - 建議的配對範圍： 50 公分 以內
  - 建議的操作範圍: 5 公尺 以內
- 在電視聲音連接模式下，Play/Pause、Next、Prev 鍵不可操作。

► 使用藍牙開啟電源功能

僅當使用 TV SoundConnect 將 SoundStand 連接至藍牙相容電視機之後，Bluetooth POWER On 功能才可用。
開啟 Bluetooth POWER On 功能時，開啟或關閉連接的電視機還會開啟或關閉 SoundStand 的電源。

1. 使用電視聲音連接功能將電視機連接至 SoundStand。
2. 按下 SoundStand 遙控器上的 **Bluetooth POWER** 鍵。 "BLUETOOTH POWER ON" 會出現在 SoundStand 的顯示螢幕上。
   - BLUETOOTH POWER ON : SoundStand 會在您開啟或關閉電視機時開啟或關閉。
   - BLUETOOTH POWER OFF : SoundStand 僅在您關閉電視機時關閉。

- 只有在 2013 年起發行的一些三星電視機支援此功能。
- 如果透過電視聲音連接將 SoundStand 連接至電視機，然後您透過關閉電視機來關閉 SoundStand，則 Bluetooth Power(藍牙電源) 功能將無法開啟 SoundStand，即使將其他藍牙裝置連接至它也不例外。

USB

您可以透過 SoundStand 播放位於 USB 儲存裝置上的音樂檔案。

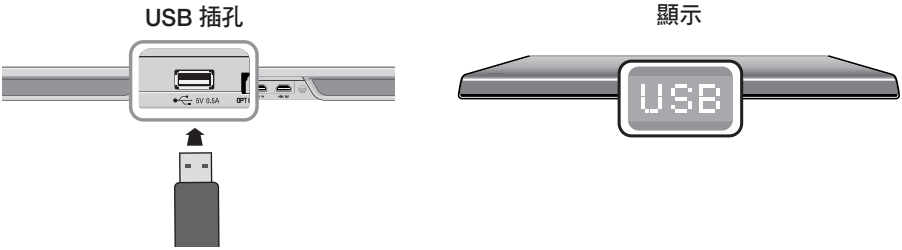

1. 將 USB 裝置連接到產品背面上的 USB 插孔。
2. 重複按下遙控器上的 **SOURCE** 鍵或產品頂端面板上的 (**F.**) 鍵，直到顯示 **USB**。
3. **USB** 出現在顯示螢幕上。
   - SoundStand 與 USB 裝置之間的連線已完成。
   - 如果超過 25 分鐘未連接 USB 裝置，SoundStand 會自動關閉 (自動關閉電源)。

► 在連接 USB 裝置之前

了解如下資訊：

- 如果 USB 裝置上資料夾的檔案名稱超過 10 個字元，它不會顯示在 SoundStand 的顯示螢幕上。
- 本產品可能與某些類型的 USB 儲存媒體不相容。
- SoundStand 支援 FAT16 和 FAT32 檔案系統。
  - 不支援 NTFS 檔案系統。
- 將 USB 裝置直接連接到產品的 USB 插孔。 否則可能會遇到 USB 相容性問題。
- 切勿透過多卡閱讀器將多個儲存裝置連接至本產品， 否則本產品可能無法正確運作。
- 不支援數碼相機 PTP 通訊協定。
- 切勿移除正在讀取的 USB 裝置。
- 商業網站中受 DRM 保護的音樂檔案 (MP3、WMA) 無法播放。
- 不支援外部 HDD。
- 不支援手機裝置。
- 檔案格式類型相容性清單：

格式	編解碼器
***.mp3**	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
***.wma**	Wave_Format_ MSAudio1
	Wave_Format_ MSAudio2
***.aac**	AAC
	AAC-LC
	HE-AAC
***.wav**	-
***.Ogg**	OGG 1.1.0
***.Flac**	FLAC 1.1.0, FLAC 1.2.1

※ 支援 16KHz 以上的採樣率

軟件升級

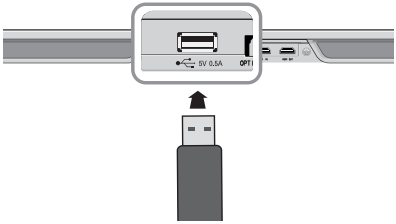

三星以後可能會提供 SoundStand 的系統固件升級。

有升級可用時，若要升級韌體，請將儲存有韌體升級的 USB 裝置連接至 SoundStand 上的 USB 連接埠。

請注意，如果有多個升級檔，必須將它們一個個載入到 USB 裝置上，然後一次性使用它們來升級韌體。

請造訪 Samsung.com 或聯絡三星服務中心，以獲取關於下載升級檔案的更多資訊。

- 將含有韌體升級的 USB 裝置插入主裝置的 USB 連接埠。
- 套用升級期間，不要斷開電源或取下 USB 裝置。 主設備將在完成固件升級後自動關閉。
  升級軟件時，所有設定都將重設為其出廠預設設定。
  建議記下您的設定，以便在升級之後輕鬆重設。
- 一旦產品軟件升級完成，關閉本產品，然後按住 (▶II) 鍵一段時間以重設本產品。
- 如果固件升級失敗，建議以 FAT16 格式化 USB 裝置，然後重試。
- 不要以 NTFS 格式來格式化 USB 磁碟機。 SoundStand 不支援 NTFS 檔案系統。
- 根據製造商，某些 USB 裝置可能不受支援。

故障排除

在請求服務前，請檢查下列內容。

設備無法開啟電源。	
• 電源線是否已插入插座？	→ 將電源插頭連接至電源插座。

按下按鍵時，相應的功能無法運作。	
• 空氣中有靜電嗎？	→ 拔下電源插頭，然後重新連接。

不發出聲音。	
• 靜音功能是否開啟？	→ 按下 Mute 鍵以取消此功能。
• 音量是否設定為最小？	→ 調整音量。

遙控器不起作用。	
• 電池是否用盡？	→ 更換新電池。
• 遙控器與主設備之間的距離是否太遠？	→ 移近本設備。

電視聲音連接(電視機配對) 失敗。	
• 電視機支援電視聲音連接嗎？	→ 自從 2012 年起發行的一些三星電視機支援電視聲音連接功能。請檢查電視機是否支援電視聲音連接。
• 電視機固件是最新版本嗎？	→ 以最新固件更新電視機。
• 連接時有發生錯誤嗎？	→ 聯絡三星服務中心。
• 重設 TV 模式並再次連接。	→ 按住 ►II 鍵 5 秒鐘以重設電視聲音連接連線。

附錄

規格

型號名稱	HW-H600

一般	USB	5V/0.5A
	重量	5 千克
	尺寸（寬 x 深 x 高）	735 x 36.5 x 360 毫米
	工作溫度範圍	+5 ℃ 到 +35 ℃
	工作濕度範圍	10 % 到 75 %
放大器	額定輸出功率	80 W(MID/TWT = 8 OHM, SW = 4 OHM) THD = 10 %, 1 kHz
	訊噪比（模擬輸入）	65 dB
	分離度 (1kHz)	65 dB

* 訊噪比、失真度、分離度與可用靈敏度基於使用 AES (音訊工程學會) 指導原則的量測。

* 額定規格
- Samsung Electronics Co., Ltd 保留隨時變更規格的權利，恕不另行通知
- 重量和尺寸為估計值。
- 電源和消耗功率，請參考本產品上的標籤。

授權

DOLBY DIGITAL

根據 Dolby Laboratories 的許可證製造。 Dolby 和雙 D 標誌是 Dolby Laboratories 的商標。

dts 2.0 Channel

如需 DTS 專利，請造訪 http://patents.dts.com。根據 DTS Licensing Limited 的許可證製造。DTS、該標誌 & DTS 和該標誌一起均為 DTS, Inc. 的註冊商標，而 DTS 2.0 Channel 是 DTS, Inc. 的商標。©DTS, Inc. 版權所有。

HDMI

詞語 HDMI 和 HDMI High-Definition Multimedia Interface 以及 HDMI 標記是 HDMI Licensing LLC 在美國以及其他國家/地區的商標或註冊商標。

- 要傳送關於開放來源的查詢與請求，請透過電子郵件 (oss.request@samsung.com) 聯絡三星。

ENERGY STAR PARTNER

身為能源之星合作夥伴，三星確定本產品或產品機型符合能源之星的能效原則。

SAMSUNG

在全球範圍內聯絡三星

如果您有任何關於三星產品的問題或建議，請聯絡三星客戶服務中心。

區域	聯絡中心 ☎	網址
▪ 亞太地區		
澳洲	1300 362 603	www.samsung.com/au/support
紐西蘭	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
中國	400-810-5858	www.samsung.com/cn/support
香港	(852) 3698 4698	www.samsung.com/hk/support (中文) www.samsung.com/hk_en/support (英文)
印度	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
印尼	0800112888 021-56997777	www.samsung.com/id/support
日本	0120-327-527	www.samsung.com/jp/support
馬來西亞	1800-88-9999	www.samsung.com/my/support
菲律賓	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
新加坡	1800-SAMSUNG (726-7864)	www.samsung.com/sg/support
泰國	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
台灣	0800-32-9999	www.samsung.com/tw/support
越南	1800 588 889	www.samsung.com/vn/support
▪ MENA		
阿拉伯聯合大公國	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (英文) www.samsung.com/ae_ar/support (阿拉伯文)
阿曼	800-SAMSUNG (726-7864)	
科威特	183-2255 (183-CALL)	
巴林	8000-4726	
卡達	800-2255 (800-CALL)	
埃及	08000-726786 16580	www.samsung.com/eg/support
阿爾及利亞	021 36 11 00	www.samsung.com/n_africa/support
巴基斯坦	0800-Samsung (72678)	www.samsung.com/pk/support
突尼斯	80-1000-12	www.samsung.com/n_africa/support
約旦	0800-22273 06 5777444	www.samsung.com/Levant/support (英文)
敘利亞	18252273	www.samsung.com/Levant/support (英文)
伊朗	021-8255	www.samsung.com/iran/support
摩洛哥	080 100 2255	www.samsung.com/n_africa/support
沙烏地阿拉伯	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (英文)
土耳其	444 77 11	www.samsung.com/tr/support
▪ 非洲		
尼日利亞	0800-726-7864	www.samsung.com/africa_en/support
加納	0800-10077 0302-200077	
象牙海岸	8000 0077	www.samsung.com/africa_fr/support
塞內加爾	800-00-0077	
喀麥隆	7095- 0077	
肯雅	0800 545 545	www.samsung.com/support
烏干達	0800 300 300	
坦桑尼亞	0685 88 99 00	
盧旺達	9999	
布隆迪	200	
DRC	499999	
蘇丹	1969	
南非	0860 SAMSUNG (726 7864)	www.samsung.com/support
博茨瓦那	8007260000	
納米比亞	08 197 267 864	
尚比亞	0211 350370	
莫桑比克	847267864 / 827267864	